



Welche Ersatzplatten passen zu welchem Stativ? / Quelles plaques de rechange conviennent à quel trépied ?

	G1173/14B	GS5370B	GS5370LB	GS5370C	GS5370MC	GS5370LC	GS5370XLC	GS5370SDR	DE112901C233	GS5370DR	GS5370LDR
	133544	133545	133548	133546	133551	133549	133553	133552	133554	133547	133550
Type	A	B	B	C	C	C	C	D	D - Sony Alpha	D	D
attachemt size	1/4"	1/4", 3/8"	2x1/4", 2x3/8"	1/4", 3/8"	1/4", 3/8"	2x1/4", 2x3/8"	2x1/4", 2x3/8"	1/4"	1/4"	1/4", 3/8" adaptor	3x1/4", 3/8" adaptor
	34x47mm	54x56mm	54x143mm	38x38mm	38x82mm	38x140mm	38x200mm	55x40mm	55x40mm	55x70mm	55x140mm

Collection	Head	Lock type	Type	A	B	B	C	C	C	C	D	D - Sony Alpha	D	D	
Center ball	G0077	direct attachment with 1/4" screw	-												
	G1077M	direct attachment with 1/4" screw	-												
	G1177M	direct attachment with 1/4" screw	-												
	G1178M	quick release	C				X	X	X	X					
	G1277M	direct attachment with 1/4" screw	-												
	G1278M	quick release	C				X	X	X	X					
	G1377M	direct attachment with 1/4" screw	-												
	G1378M	quick release	C				X	X	X	X					
	GH1382QD	quick release	D								X	X	X	X	
	GH1383TQD	quick release	D								X	X	X	X	
	GH1780	direct attachment with 1/4" screw	-												
	GH1780FQR	quick release	C				X	X	X	X					
	GH1780QR	quick release	C				X	X	X	X					
	GH1781QR	quick release	C				X	X	X	X					
	GH1781T	direct attachment with 1/4" screw	-												
	GH1781TQD	quick release	C				X	X	X	X					
	GH2780	direct attachment with 1/4" screw	-												
	GH2780FQR	quick release	C				X	X	X	X					
	GH2780QR	quick release	C				X	X	X	X					
	GH2781QR	quick release	C				X	X	X	X					
	GH2781T	direct attachment with 1/4" screw	-												
	GH2781TQD	quick release	C				X	X	X	X					
	GH3382QD	quick release	D								X	X	X	X	
	GH3780	direct attachment with 1/4" screw	-												
	GH3780QR	quick release	C				X	X	X	X					
	GH3781QR	quick release	C				X	X	X	X					
	GH4383QD	quick release	D								x	x	X	X	
	GH4383LR	quick release	D								x	x	X	X	
	GH5380S	direct attachment with 1/4" screw	-												
	GH5380SQR	quick release	C				X	X	X	X					



				G1173/14B	GS5370B	GS5370LB	GS5370C	GS5370MC	GS5370LC	GS5370XLC	GS5370SDR	DE112901C233	GS5370DR	GS5370LDR	
				133544	133545	133548	133546	133551	133549	133553	133552	133554	133547	133550	
				Type	A	B	B	C	C	C	C	D	D - Sony Alpha	D	D
				attachemt size	1/4"	1/4", 3/8"	2x1/4", 2x3/8"	1/4", 3/8"	1/4", 3/8"	2x1/4", 2x3/8"	2x1/4", 2x3/8"	1/4"	1/4"	1/4", 3/8" adaptor	3x1/4", 3/8" adaptor
Collection	Head	Lock type	size	34x47mm	54x56mm	54x143mm	38x38mm	38x82mm	38x140mm	38x200mm	55x40mm	55x40mm	55x70mm	55x140mm	
Quick release adaptor	G2285MB	quick release	C				X	X	X	X					
	GS3760C	quick release	C				X	X	X	X					
	GS5360AS	quick release	A/B	X	X	X									
	GS5760C	quick release	C				X	X	X	X					
Off center ball	G1275M	direct attachment with 1/4" screw	-	X											
	G1276M	quick release	A												
	G1375M	direct attachment with 1/4" screw	-												
	G1376M	quick release	A	X											
	G1575M	direct attachment with 1/4" screw	-												
	G1576M	quick release	A	X											
	GH2750	direct attachment with 1/4" screw	-												
	GH2750QR	quick release	A	X											
	GH3750	direct attachment with 1/4" screw	-												
	GH3750QR	quick release	B		X	X									
GH5750QR	quick release	B		X	X										
Gimbal	GHFG1	quick release	D								X	X	X	X	
2way	G1380	quick release	C					X	X	X					
	G2180	quick release	C				X	X	X	X					
	G2380	quick release	C					X	X	X					
	GH1720FQR	quick release	C				X	X	X	X					
	GH1720QR	quick release	C				X	X	X	X					
	GH2720FQR	quick release	C				X	X	X	X					
	GH2720QR	quick release	C				X	X	X	X					
GHG2W	quick release	D								X	X	X	X		
3way	G1570M	direct attachment with 1/4" screw	-												
	G2270M	direct attachment with 1/4" screw	-												
	G2271M	direct attachment with 1/4" screw	-												
	G2272M	quick release	C				X	X	X	X					
	GHG3W	quick release	D								X	X	X	X	
Panoramic	GS3750D	direct attachment with 1/4" screw	-												
	GS3750DQR	quick release	C				X	X	X	X					