

Accessory AW Cover Fit Guide

Adventura BP 150 III Flipside 200 AW II Flipside Trek BP 250 AW RunAbout BP 18L RunAbout BP 18L II Photo Active BP 200 AW PhotoSport BP 15L AW III Slingshot SL 250 AW III Slingshot Edge 250 AW Tahoe BP 130 Tahoe BP 150 Truckee BP 150 LX Truckee BP 200 LX Truckee BP 250 Truckee BP 250 LX	S	M	L
Adventura BP 300 III DroneGuard BP 250 Fastpack BP 250 AW III Fastpack Pro BP 250 AW III Flipside BP 300 AW III Flipside BP 400 AW III Flipside Trek BP 350 AW Flipside Trek BP 450 AW FreeLine BP 350 AW Photo Active BP 300 AW PhotoSport BP 24L AW III Pro Trekker BP 350 AW II ProTactic BP 300 AW II ProTactic BP 350 AW II	S	M	L
Flipside 500 AW II PhotoSport X BP 35L AW Pro Trekker BP 450 AW II ProTactic BP 450 AW II	S	M	L
PhotoSport X BP 45L AW PhotoSport PRO 55L AW III(M-L) PhotoSport PRO 55L AW III(S-M) PhotoSport PRO 70L AW III(M-L) PhotoSport PRO 70L AW III(S-M) PhotoSport PRO 55L AW IV(M-L) PhotoSport PRO 55L AW IV(S-M) PhotoSport PRO 70L AW IV(M-L) PhotoSport PRO 70L AW IV(S-M) Powder BP 500 AW Pro Trekker BP 550 AW II Pro Trekker BP 650 AW	S	M	L